

# MIRAX

## HiS-4100

### Quick Start Guide

► For TV Box

 
## Packing list



BOX 1pcs



Remote 1pcs



HDMI Cable 1pcs



IR Cable



Electric source 1pcs

## Remote

 


1. **POWER** - Switch on or switch off receiver
2. **MUTE** - Switch on or switch off receiver's sound.
3. **FIND** - Search channel, program or application.
4. **Youtube** - A shortcut to run Youtube.
5. **IP/DVB** - A shortcut to run IPTV or DVB.
6. **AUDIO** - A shortcut to change Multi-Audio.
7. **0-9** - Numerical key.
8. **Teletext** - Display Teletext information of channel.
9. **Subtitle** - Display Subtitle information of channel.
10. **FAV** - A shortcut to the favorite channel list.
11. **Group** - A shortcut to Satellite list on DVB or channel list on IPTV..
12. **▲/▼** - Page up/down.
13. **🔊/🔇** - Adjust receiver's volume.
14. **EPG** - Display Electronic program Guide information.
15. **INFO** - Display detailed information of channel, program or application.
16. **◀/▶** - Moving the highlight to left/right.
17. **▲/▼** - Moving the highlight to up/down.
18. **OK** - Confirm the selection.
19. **MENU** - The entry of application's functions.
20. **BACK** - Back to the previous menu.
21. **COLORIZED KEYS** - Entries of application's key functions.
22. **RECALL** - A shortcut to historical channel list
23. **TV/Radio** - A shortcut to switch between TV and Radio channel list
24. **⏮** - Play backward on Media
25. **⏭** - Play forward on Media
26. **RECORD** - Record program to local storage such as USB stick.
27. **PLAY** - Start to play media.
28. **PAUSE** - Pause the playing of media.
29. **STOP** - Exit the playing of media.



## Front Panel



## Rear Panel

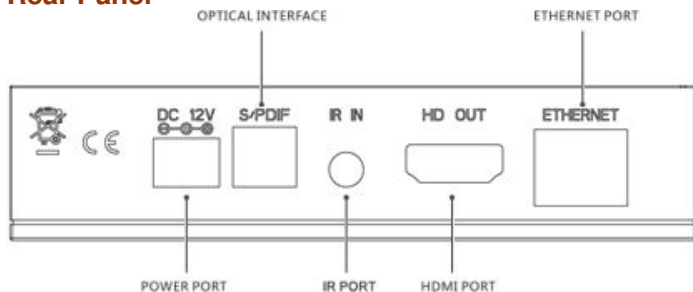

## Side Panel

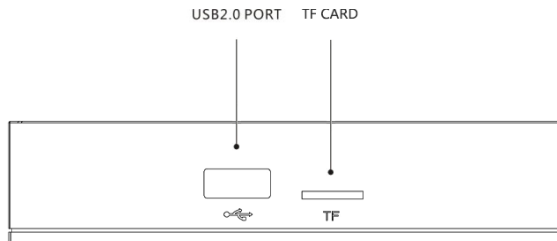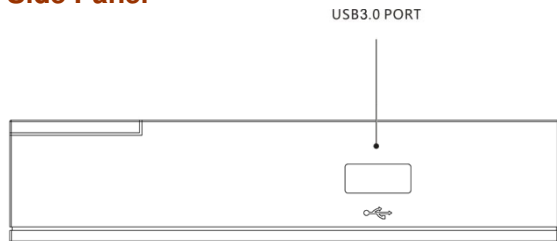  

## Preparation

### 1.Connecting Internet cable

Connect Ethernet cable to the 'Ethernet' Port of the rear panel of the box.

### 2.Connecting the TV

Connecting TV via HDMI cable.

### 3.Power ON/OFF

There are several ways to turn the box ON or OFF.

#### ●Complete Power Shutdown

 
Remove the power supply, it takes a longer time to boot the system if you turned it off by this way.

#### ●Standby Mode

Press the **POWER**  button to turn the box on or off.

The box includes a standby mode for lower power consumption which locates at **[Setting >System Options>Real standby]**.

If **Real standby** set to **OFF**, the system is not completely shutdown and thus it takes a few seconds to restart.

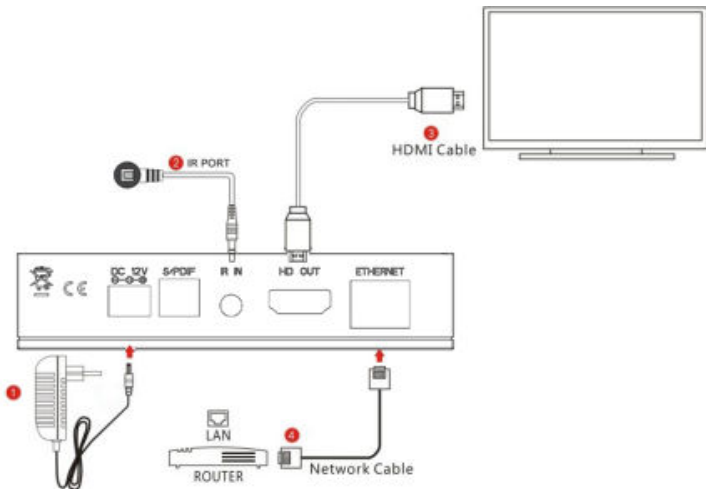


## First Time installation

When you switch the box on for the first time, the easy installation starts automatically with the language selection.

### 1. Language Selection

 Use **▲/▼** button to scroll up and down to select the desired language and confirm with **OK** button.

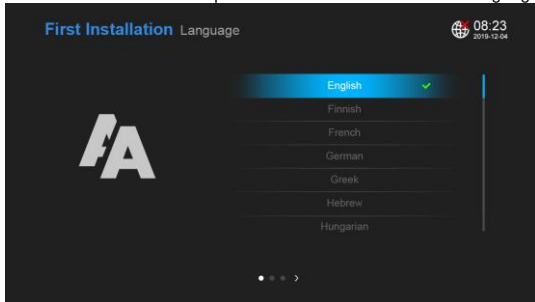


### 2. Press ► button to go to next region setting.

Use **▲/▼** button to scroll up and down to select the desired time zone and confirm with **OK** button.




### 3. Press ► button to go to next search setting.

 Use ^/▼ button to scroll up and down to setup the URL etc

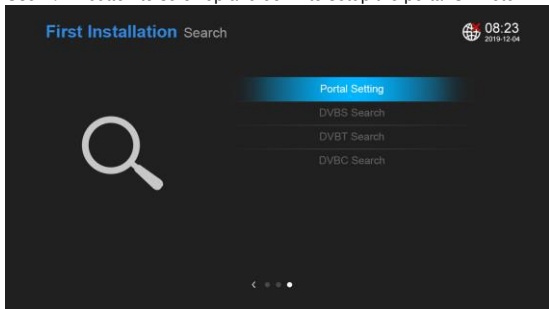

### 4. Full Settings Menu.

 After installation guider, you can enter the Settings menu through Main menu and set everything what you may need.

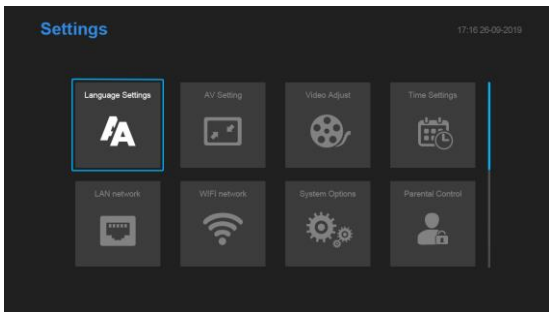



## Specifications

<b>Main Processor</b>	Cortex-A53 QUAD CORE 1.6G CPU
<b>Flash Memory</b>	NAND : 256MBytes
<b>DDR SDRAM</b>	512MByte
<b>Input Voltage</b>	DC 12V/1A
<b>Power Consumption</b>	MAX: 10W Standby:<0.5W
<b>S/PDIF</b>	Digital Audio or Dolby Digital Bit Stream Output
<b>Network</b>	LAN: 100Mb
<b>WIFI</b>	802.11 b/g/n 2.4G WIFI
<b>USB</b>	One USB 2.0 host and One USB 3.0
<b>HDMI</b>	VER1.4b
<b>Operation Temperature</b>	0°C~+45°C
<b>Storage Temperature</b>	-10°C~+70°C

## Trouble shooting

Before you contact your local service center, please read the following tips carefully.

### 1. No video on TV

- Check first if the product is powered on and in operational mode.
- Check if the video cable is properly connected between TV and the box.
- Check if the internet cable is properly connected between Router and the box.

### 2. Problem with audio quality

- Check if your audio cable is connected correctly.
- Check the volume level of your TV and the box.
- Check if the box or TV is on mute.
- Check the audio option if it is correctly selected for the program that you are currently watching.

### 3. Poor audio and video quality

- Check if the internet cable is properly connected between Router and the box and the internet bandwidth is enough.

### 4. Remote control problem

- Check if the battery is low power.
- Point the remote control directly toward the box.
- Make sure that nothing blocks the front panel display.

### 5. Recording problem

- Check if the HDD has a sufficient space for recording.
- Check if there is a conflict between recordings.

## NOTICE

- Specifications are subject to change without further notice.
- The manufacturer does not assume any responsibility regarding any errors or mistakes in printing.
- Please note that a new software may change the features of the receiver.
- The manufacturer holds the rights of changes without any further notice.