

 
MIRAX

HiS-4100

Quick Start Guide

► For TV Box


Packing list

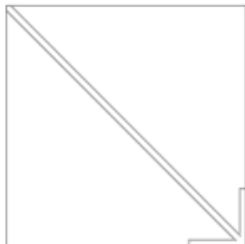

BOX 1pcs



 Remote 1pcs



HDMI Cable 1pcs



IR Cable



Electric source 1pcs

Remote

 


1. **POWER** - Switch on or switch off receiver
2. **MUTE** - Switch on or switch off receiver's sound.
3. **FIND** - Search channel, program or application.
4. **Youtube** - A shortcut to run Youtube.
5. **IP/DVB** - A shortcut to run IPTV or DVB.
6. **AUDIO** - A shortcut to change Multi-Audio.
7. **0-9** - Numerical key.
8. **Teletext** - Display Teletext information of channel.
9. **Subtitle** - Display Subtitle information of channel.
10. **FAV** - A shortcut to the favorite channel list.
11. **Group** - A shortcut to Satellite list on DVB or channel list on IPTV..
12. **Up/Down** - Page up/down.
13. **Volume** - Adjust receiver's volume.
14. **EPG** - Display Electronic program Guide information.
15. **INFO** - Display detailed information of channel, program or application.
16. **Left/Right** - Moving the highlight to left/right.
17. **Up/Down** - Moving the highlight to up/down.
18. **OK** - Confirm the selection.
19. **MENU** - The entry of application's functions.
20. **BACK** - Back to the previous menu.
21. **COLORIZED KEYS** - Entries of application's key functions.
22. **RECALL** - A shortcut to historical channel list
23. **TV/Radio** - A shortcut to switch between TV and Radio channel list
24. **Play backward** - Play backward on Media
25. **Play forward** - Play forward on Media
26. **RECORD** - Record program to local storage such as USB stick.
27. **PLAY** - Start to play media.
28. **PAUSE** - Pause the playing of media.
29. **STOP** - Exit the playing of media.



Front Panel



Rear Panel

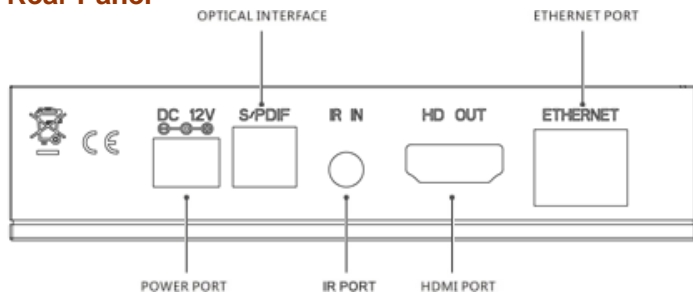

Side Panel

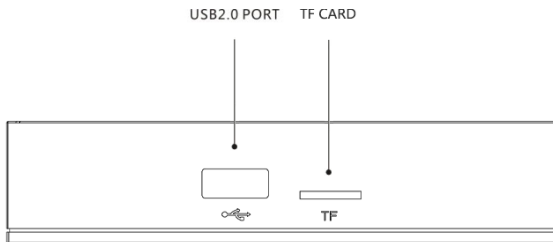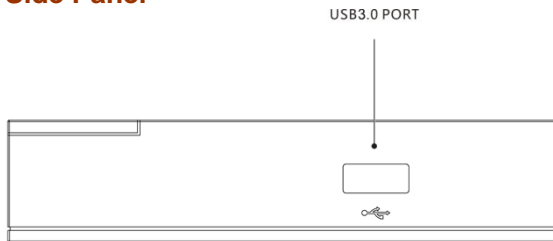  

Preparation

1.Connecting Internet cable

Connect Ethernet cable to the 'Ethernet' Port of the rear panel of the box.

2.Connecting the TV

Connecting TV via HDMI cable.

3.Power ON/OFF

There are several ways to turn the box ON or OFF.

●Complete Power Shutdown

Remove the power supply, it takes a longer time to boot the system if you turned it off by this way.


●Standby Mode

Press the **POWER**  button to turn the box on or off.

The box includes a standby mode for lower power consumption which locates at

[Setting >System Options>Real standby].

If **Real standby** set to **OFF**, the system is not completely shutdown and thus it takes a few seconds to restart.

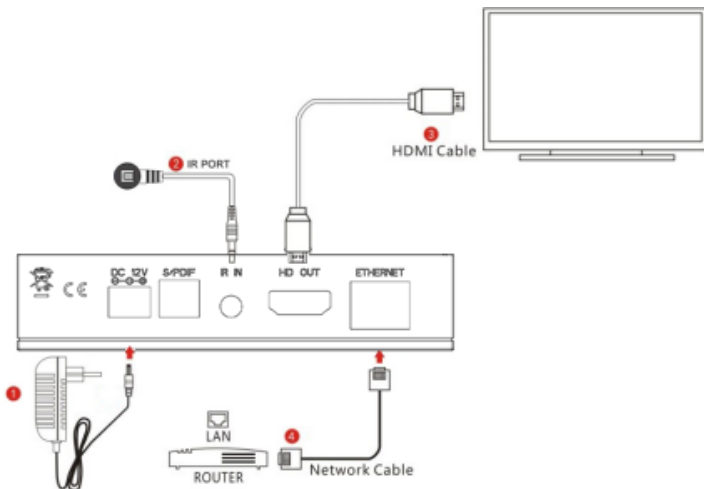


First Time installation

When you switch the box on for the first time, the easy installation starts automatically with the language selection.

1. Language Selection

 Use **▲▼** button to scroll up and down to select the desired language and confirm with **OK** button.

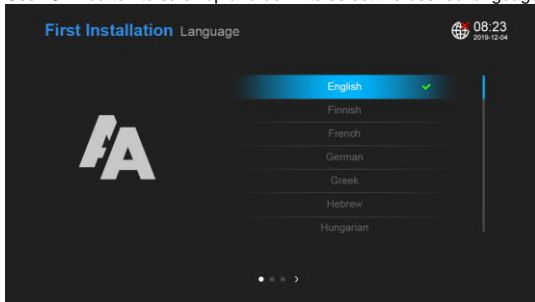


2. Press ► button to go to next region setting.

Use **▲▼** button to scroll up and down to select the desired time zone and confirm with **OK** button.




3. Press ► button to go to next search setting.

Use ▲▼ button to scroll up and down to setup the portal URL etc

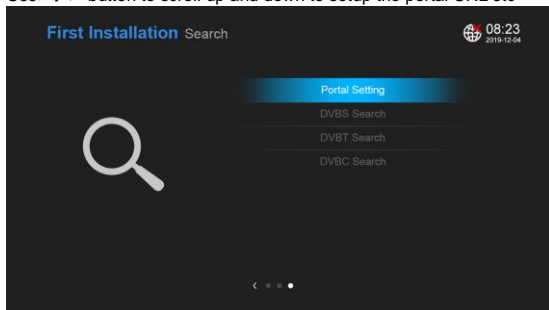

4. Full Settings Menu.

After installation guider, you can enter the Settings menu through Main menu and set everything what you may need.

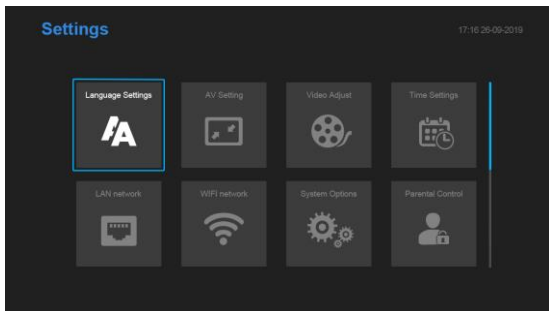

Specifications

Main Processor	Cortex-A53 QUAD CORE 1.6G CPU
Flash Memory	NAND : 256MBytes
DDR SDRAM	512MByte
Input Voltage	DC 12V/1A
Power Consumption	MAX: 10W Standby:<0.5W
S/PDIF	Digital Audio or Dolby Digital Bit Stream Output
Network	LAN: 100Mb
WIFI	802.11 b/g/n 2.4G WIFI
USB	One USB 2.0 host and One USB 3.0
HDMI	VER1.4b
Operation Temperature	0°C~+45°C
Storage Temperature	-10°C~+70°C

Trouble shooting

Before you contact your local service center, please read the following tips carefully.

1. No video on TV

- Check first if the product is powered on and in operational mode.
- Check if the video cable is properly connected between TV and the box.
- Check if the internet cable is properly connected between Router and the box.

2. Problem with audio quality

- Check if your audio cable is connected correctly.
- Check the volume level of your TV and the box.
- Check if the box or TV is on mute.
- Check the audio option if it is correctly selected for the program that you are currently watching.

3. Poor audio and video quality

- Check if the internet cable is properly connected between Router and the box and the internet bandwidth is enough.

4. Remote control problem

- Check if the battery is low power.
- Point the remote control directly toward the box.
- Make sure that nothing blocks the front panel display.

5. Recording problem

- Check if the HDD has a sufficient space for recording.
- Check if there is a conflict between recordings.

NOTICE

- Specifications are subject to change without further notice.
- The manufacturer does not assume any responsibility regarding any errors or mistakes in printing.
- Please note that a new software may change the features of the receiver.
- The manufacturer holds the rights of changes without any further notice.